



# Installation instructions

# **MEMOLUB® ONE**



## PRECAUTIONS

- Do not open the housing: loaded spring
- Hold MEMOLUB® down during manual checks
- $Leq < 70$  dB
- Use MEMOLUB® only for greasing machinery
- Use only lubricant cartridges and batteries recommended by the manufacturer

## CONTENTS

Technical information .....	page 2
<b>A</b> Replacing cartridge .....	page 3
<b>B</b> Direct installation .....	page 3
<b>C</b> Remote installation .....	page 4
<b>D</b> Check Function .....	page 4

# TECHNICAL INFORMATION


## Settings of the Memo

	Color	Emptying time of cartridge	Average daily output
	white	12 months	0,65 cm <sup>3</sup> / day
	red	6 months	1,3 cm <sup>3</sup> / day
	green	3 months	2,6 cm <sup>3</sup> / day
	yellow	1 months	8 cm <sup>3</sup> / day

1 stroke with manual grease gun  $\approx$  1 cm<sup>3</sup>


## Dimensions

240 cm<sup>3</sup>

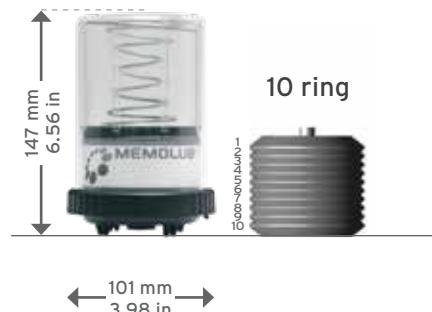


# A


## REPLACING CARTRIDGE

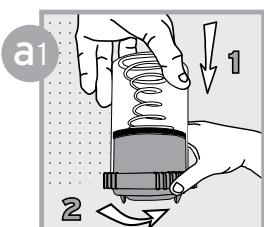


Open (fingers on ribs)

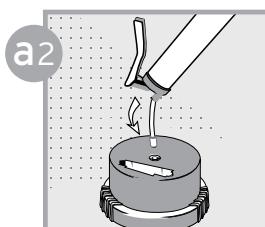


Prime MEMOLUB®

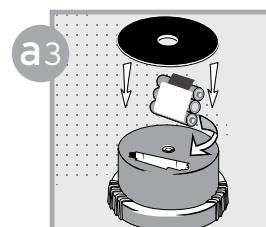


Insert new battery pack and seal

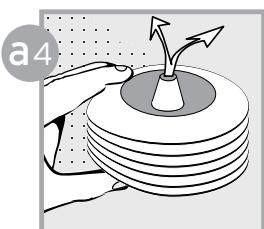

Squeeze air out of cartridge

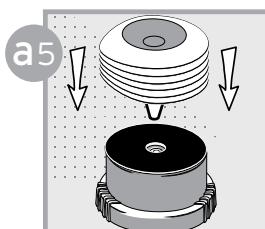


Replace cartridge

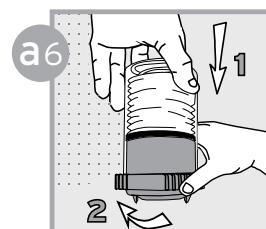


Close and lock (fingers on ribs)

# B


## DIRECT INSTALLATION

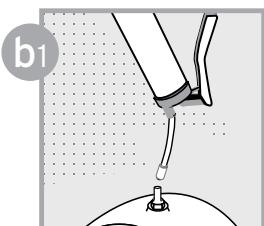


Prime lube point and remove nipple

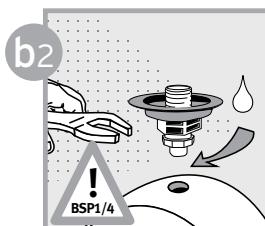

Screw in Memo using threadlocker

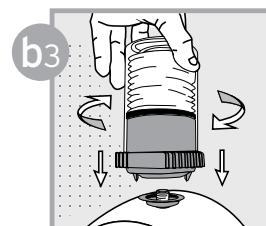


Install MEMOLUB® on Memo

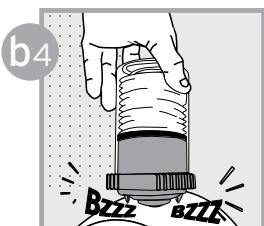


MEMOLUB® works immediately

# C


## REMOTE INSTALLATION

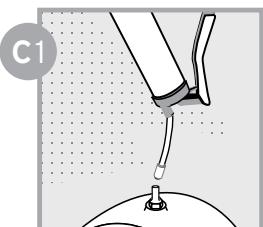


Prime lube point  
and remove nipple

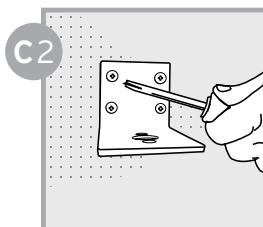


Secure bracket

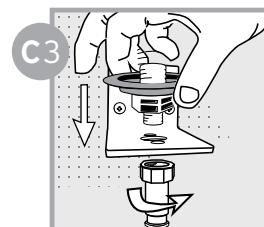


Install Memo and F1/4 fitting

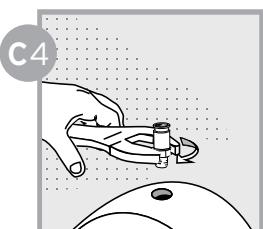


Screw BSP 1/8 fitting

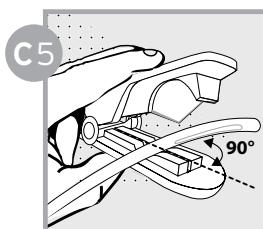


Cut hose to required size

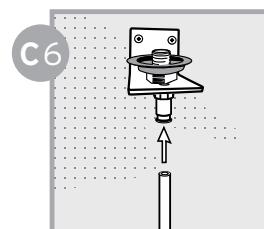


Insert hose into quick fitting

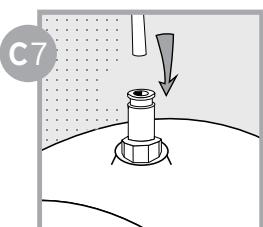

Insert hose into quick fitting

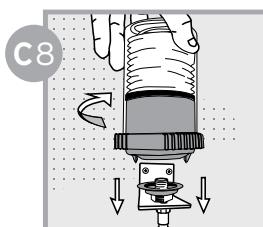


Install MEMOLUB® on Memo

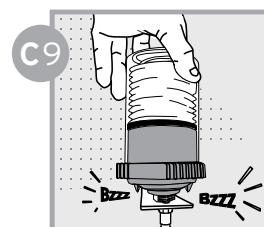


MEMOLUB® works immediately

# D

## CHECK FUNCTION

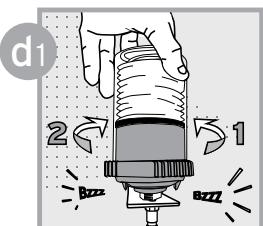

To check unit: unscrew  
and screw again

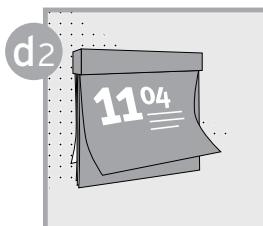

Check regularly